


Installation Instructions for 1.5" Drain Fittings

1. Position the drain as low as possible to the floor. Place the fitting along the non-traffic side of the berm, about 2' from a corner.
2. Using one gasket, trace the inside diameter that the threaded fitting will pass through using a white Sharpie or pencil.
3. Use a razor knife to carefully cut out the traced circle.
4. The 1.5" Bulkhead Drain will have rubber gaskets on inside and out and will not require sealant.
5. Install rubber gaskets on both sides of the berm wall.
6. Hand tighten plus $\frac{3}{4}$ turn.
7. Install the Plug prior to use as a containment berm.

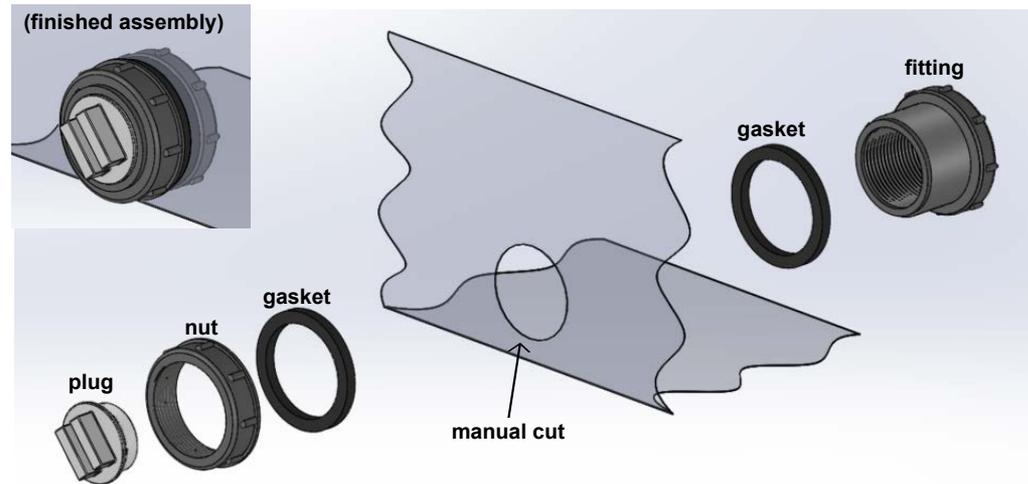

To Add HFF Filter

RECOMMENDED USE of Teflon Tape or Liquid Teflon for all connections

1. Attach HFF to Ball Valve, then attach one gray PVC Nipple to other side of Ball Valve.
2. Detach Plug from Drain Fitting Assembly, replace with gray PVC Nipple.
3. Attach short side of T-Adaptor to PVC Nipple on Drain Fitting.
4. Attach HFF with Ball Valve to one side of T-Adaptor, and screw in Plug to other side.

Should Flow Become Restricted:

1. Shut Ball Valve, detach HFF from Ball Valve and remove Pre-Filter from inside neck of HFF.
2. Clear debris from Pre-Filter, backflush and reinstall Pre-Filter to HFF, then reattach to Ball Valve.

